

Casale Trim T/a Swift Appliance Group



25-27 BROOKLYN COURT or 14-16 BROOKLYN COURT ♦ CAMPBELLFIELD VICTORIA 3061 ♦ AUSTRALIA
Phone (03) 9359 3068 ♦ Fax (03) 9357 2279 ♦ Email: accounts@swiftappliancegroup.com.au
ABN: 87 506 651 150 ABN: 87 506 651 150

Safety Notice to Swift 500 Series Cooker Users:

Revision: 20220716



Product Description:

All Swift 500 series cookers manufactured before the 1 June 2020 can be used providing the front left burner control knob is removed to prevent the use of that burner.

Do not use the front left burner on cookers manufactured before 1 June 2020.

All Swift 500 series cookers manufactured on or after the 1 June 2020 can continue to be used without restrictions.

For your safety:

Ensure you observe the following instructions:

1. Ensure that the front left burner control knob is in the off position.
2. Remove the control knob by grasping the edges and pulling the knob towards you. Store it in a safe place away from children or other users.
3. **Do not use** the front left burner.
4. Instruct all other users that they **must not use** the front left burner.
5. You may continue to use the other burners and the electric hotplate safely.
6. Regularly monitor our website for updates: <https://www.swiftappliancegroup.com.au/>



For your safety, ensure you observe the correct lighting procedure as follows:

1. Press the ignition switch or apply a lighted match to the relevant burner.
2. Turn the control knob to 'HI' setting, press in & hold the knob.
3. If the burner does not ignite with 5 – 10 seconds, release the knob and turn to 'OFF'.
4. Wait 5 minutes for the gas to dissipate and try again.
5. If the burner fails to light again, stop using the cooker, turn off the gas and call an authorised person to service the cooker.
6. If the burner lights correctly but you notice a smell of gas, turn off the gas and call an authorised person to service the cooker.

It is important to note that while you press in the control knob, gas will flow and continue to flow and accumulate until you stop pressing the knob. The accumulated gas can ignite and explode if there is an ignition source. Please be careful not to allow gas to accumulate. We recommend fitting a gas leak detector inside the cupboard underneath the cooker. If you intend to travel in excess of 70km/hr off-road, you must install a gas leak detector.